


# indirect

## INSTALLATION MANUAL - Indirect B Series Downlights



### Safety Information

- This product must be installed by a licensed electrician and in accordance with AS/NZS 3000 and local regulations.
- Always ensure mains power is switched OFF before commencing any electrical work.
- Do not attempt to modify this product in any way from the condition it is supplied.
- Ensure the IP rating of the luminaire and power supply are maintained during installation and use.
- DO NOT TOUCH this product during operation. Before touching this product, turn it off and allow it to cool down for 5 minutes.
- Ensure the below minimum clearances from insulation and building elements are met:

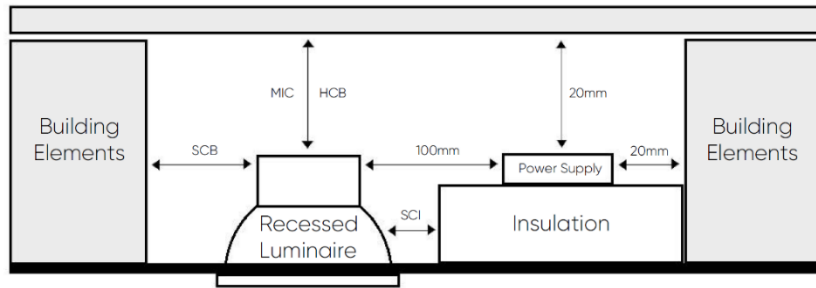

MIC – Minimum Insulation Clearance  
SCI – Minimum Side Clearance Insulation

SCB – Minimum Side Clearance Building Element  
HCB – Minimum Height Clearance Building Element

Refer to following chart for MIC, SCB, SCI, HCB measurements:

	MIC - 50mm	SCI - 50mm	SCB - 50mm	HCB - 50mm
	MIC - 50mm	SCI - 0mm	SCB - 50mm	HCB - 50mm
	MIC - 0mm	SCI - 0mm	SCB - 50mm	HCB - 50mm

### Installation Procedure

<p>1. Turn OFF the mains power.</p>	<p>2. Cut out the required hole.</p>
<p>3. Securely fix the Power Supply as per AS/NZS 3000.</p>	<p>4. Press springs upwards against luminaire and insert into the hole.</p>